

4FT Pre-Lit Flocked Pink Tree


Assembly Instructions

SKU# CH-CT94


Important:

Please read all the instructions and warnings before assembling.

Before you start to assemble your tree, choose a location near a wall outlet. Make sure the tree stand is placed on a level surface.

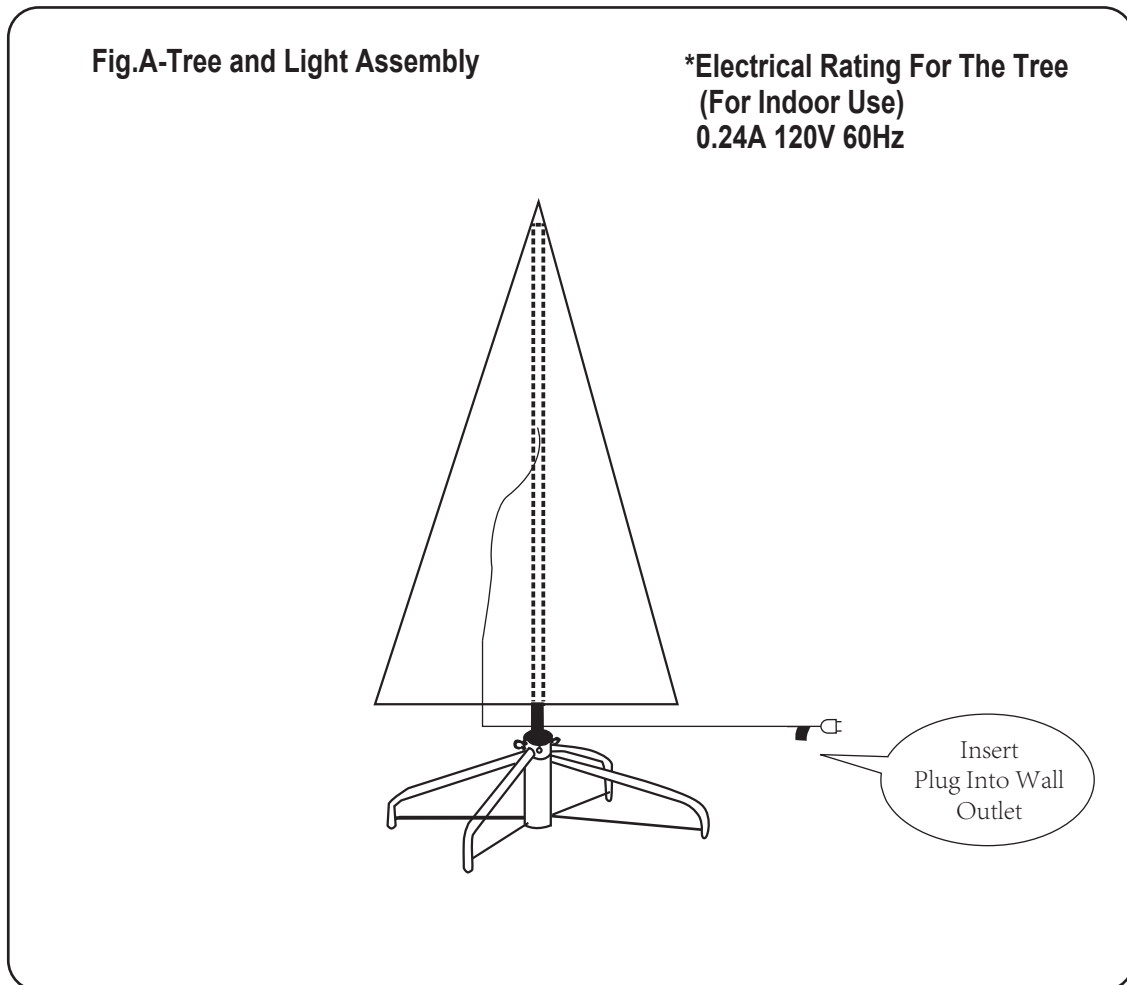

1. Please remove protective cap and assemble the tree from the bottom to the top. Start with the bottom section and insert it into metal stand. Make sure the pole is firmly inserted and secured into the stand.
2. (For pre-lit trees only) Insert plug into the wall outlet. **(See Fig. A)** Your entire tree should now be lit. If some bulbs do not light or flickers, search for any loose plugs and/or broken, loose or missing bulbs. Replace bulbs promptly in order to maintain the performance and life expectancy of your pre-lit tree.
3. Begin to shape the branches and tips working from the bottom to the top. Start with tips farthest from the pole and fan out one to the right, one to the left and one at the center of the main stem. **(See Fig. B)**

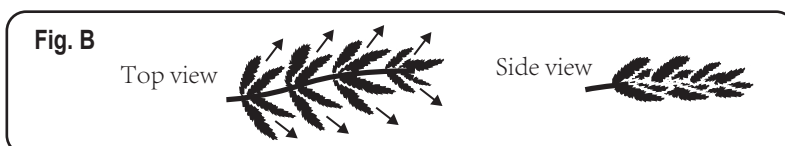

4. After shaping the entire tree following the previous step, slightly upsweep all branch tips for a uniform look. Shift branches to fill any gaps. Your Christmas tree is now complete and ready to be decorated.

STORAGE INSTRUCTIONS

1. Remove all ornaments and decorations. For pre-lit trees, first unplug the power cord from the wall outlet and then disconnect light cord between each section of the tree.
2. Disassemble the tree from the top to the bottom. Start with the tree top and gently lift straight up to remove from section below and fold all branches toward the pole.
3. In case of difficulty separating the tree pole (trunk), apply a small amount of lubricant at the joint and rotate the upper pole in both directions. Lift up the upper pole again.
4. Continue by gently lifting straight up each section(s) from the section below and fold all branches toward the pole until the bottom section is removed from the tree stand.
5. Carefully place all tree sections into shipping box and tape it shut.

TROUBLE SHOOTING TIPS

For Pre-lit Trees, If The Tree Does Not Illuminate

1. Please check to make sure that all plugs are properly connected according to the color labels indicated in **Fig.A** and the power cord is plugged into the wall outlet. Refer to assembly guide for instructions.
2. Please check for fuses at the light string plugs and power cord plug. Replace as needed. Note: Please make sure to use appropriate replacement fuses as indicated on the light string plug and power cord plug.
3. Please check for loose, broken or missing light bulbs and replace as needed.

SPARE PARTS

Each pre-lit tree includes spare bulbs and fuses. If extra parts are needed, please contact our customer service center.

STOP! Missing A part ? No need To Go Back To The Store!

The store where you made your purchase does not stock parts for this item if you need parts, whether they are missing or damaged.

Call Toll Free

TEL:1-800-893-3006

E-mail:info@zestgarden.com