

4.5FT Pre-Lit White Flocked Tree With MgO Pot


Assembly Instructions

SKU# CH-CT95


Important:

Please read all the instructions and warnings before assembling.

Before you start to assemble your tree, choose a location near a wall outlet. Make sure the tree urn is placed on a level surface.

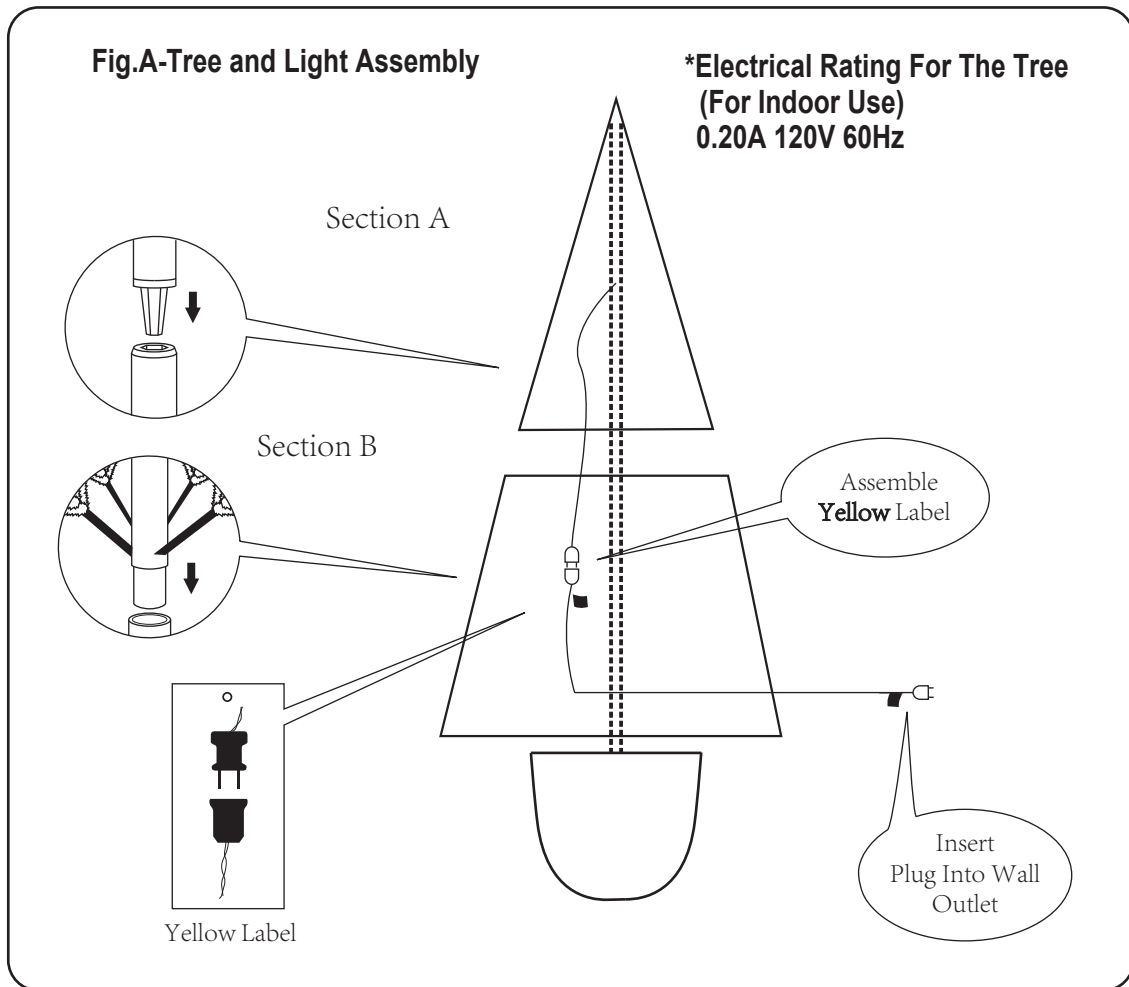

1. Each tree section is numbered with a tag named A,B. Please identify all sections before assembling.
2. Please remove protective cap and assemble the tree from the bottom to the top. Start with the bottom section and insert it into MGO urn. Make sure the pole is firmly inserted and secured into the MGO urn.
3. Please continue inserting the top section into the bottom section.
4. (For pre-lit trees only) Connect the light strings as per the color labels indicated in **Fig. A** and insert plug into the wall outlet. Your entire tree should now be lit.
5. Begin to shape the branches and tips working from the bottom to the top. Start with tips farthest from the pole and fan out one to the right, one to the left and one at the center of the main stem. (**See Fig. B**)

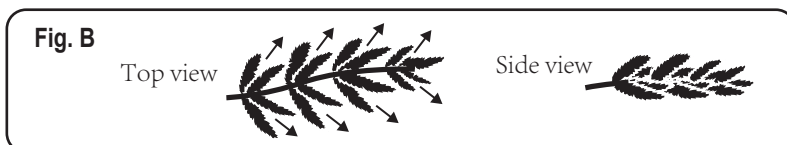

6. After shaping the entire tree following the previous step, slightly upsweep all branch tips for a uniform look. Shift branches to fill any gaps. Your Christmas tree is now complete and ready to be decorated.

The controller box has 10 different light functions, and the function will be changed each time the hand pressing is pressed.

1. Combination
2. Warm White Steady On
3. Multicolor Steady On
4. Warm white Slo-Glo
5. Multicolor Slo-Glo
6. Warm White & Multicolor Sequential
7. Warm White & Multicolor Twinkle/Flash
8. Warm White & Multicolor Slow Fade
9. Warm White & Multicolor Slo-Glo
10. Off

STORAGE INSTRUCTIONS

1. Remove all ornaments and decorations. For pre-lit trees, first unplug the power cord from the wall outlet and then disconnect light cord between each section of the tree.
2. Disassemble the tree from the top to the bottom. Start with the tree top and gently lift straight up to remove from section below and fold all branches toward the pole.
3. In case of difficulty separating the tree pole (trunk), apply a small amount of lubricant at the joint and rotate the upper pole in both directions. Lift up the upper pole again.
4. Continue by gently lifting straight up each section(s) from the section below and fold all branches toward the pole until the bottom section is removed from the tree stand.
5. Carefully place all tree sections into shipping box and tape it shut.

TROUBLE SHOOTING TIPS

For Pre-lit Trees, If The Tree Does Not Illuminate

1. Please check to make sure that all plugs are properly connected according to the color labels indicated in **Fig.A** and the power cord is plugged into the wall outlet. Refer to assembly guide for instructions.
2. Please check for fuses at the light string plugs and power cord plug. Replace as needed. Note: Please make sure to use appropriate replacement fuses as indicated on the light string plug and power cord plug.
3. Please check for loose, broken or missing light bulbs and replace as needed.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Model#RK20550-T4.5FLED

Please note that changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If

this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The responsible party contact information is as below :

Company: Big Lots Stores Inc.

<https://www.biglots.com>

Address: 4860 East Dublin-Granville Rd.Columbus, OH 43081-7650, USA

STOP! Missing A part ? No need To Go Back To The Store!

The store where you made your purchase does not stock parts for this item if you need parts,whether they are missing or damaged.

Call Toll Free

TEL:1-800-893-3006

E-mail:info@zestgarden.com