




Thanks for shopping with Jeco®

Pillar Fountain with Led Light

SKU# FCL182 / 15030224

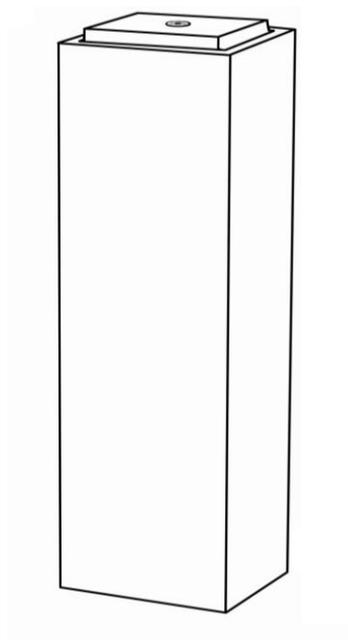

 Parts List:

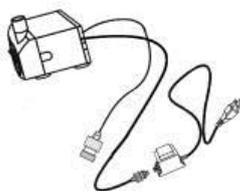A. Top Cover Qty: 1	B. Bottom Pillar Qty: 1	C. Pump and Adaptor Qty: 1	D. LED Light Qty: 1
			

JECO


1-800-893-3006
Ontario, CA 91761

Made in China


If you have questions regarding this product, call
1-800-893-3006 Mon.-Fri. 9:00-5:00 PST
(California) and ask for our product specialists, or
e-mail: cs@jeco-inc.com
See many more products on the Internet!
www.jeco-inc.com

To Assemble:

Step 1: The Led light (D) is pre-assembled at the top cover (A). Connect the Led light cable (D) to the cable comes out from the pump (C), making sure to connect both parts securely. Attach pump (C) to the pre-assembled house from the top cover (A), then align and attach the top cover to the pillar.

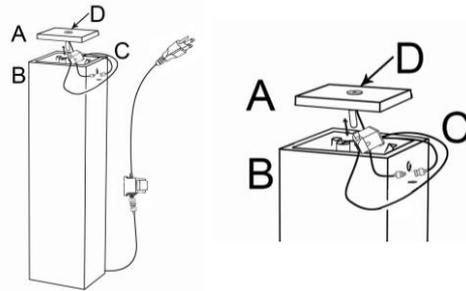


Step 2: Fill the basin (B) with clean water, making sure the pump (C) is fully submerged.
Note: The maximum water level should be approximately 1.2 inches below the top edge of the basin (B).

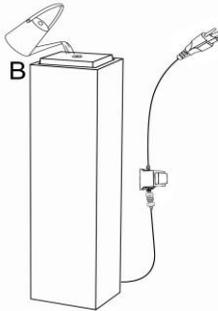

Step 3: Finally, connect the plug of pump (C) to a GFCI outlet.

WARNING: Always disconnect the pump (C) before placing your hands in the water.

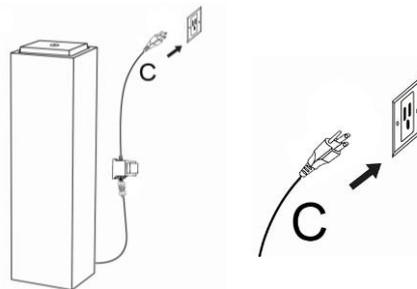

CARE AND MAINTENANCE

- To eliminate the possibility of water damage to areas around the fountain, check for leaks and excessive splashing after the initial set up of the fountain. It is highly recommended this fountain be placed in an area where it cannot be damaged.
- Do not leave the fountain running for extended periods of time when no one is present to observe the performance.
- Check the area around the fountain on a regular basis to ensure there is no leakage.
- Do not attempt to move fountain once filled with water.