
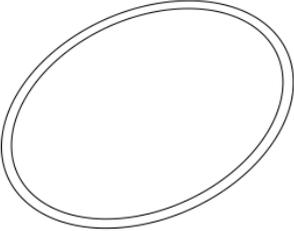


Thanks for shopping with Jeco®

Resin Wicker Dining Table

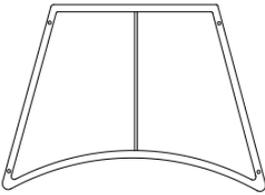

Parts List:

| | | | |
|--|---|--|--|
| A. Table Top Qty: 1  | B. Table Leg Qty: 2  | C. Side Panel Qty: 2  | |
| D. Washer Qty: 12  | E. Screw (6 x 16mm) Qty: 8  | F. Allen Wrench Qty: 1  | G. Screw(6 x 20mm) Qty: 4  |

JECO

1-800-893-3006
Ontario, CA 91761

Made in China


If you have questions regarding this product, call
1-800-893-3006 Mon.-Fri. 9:00-5:00 PST
(California) and ask for our product specialists, or
e-mail: cs@jeco-inc.com
See many more products on the Internet!
www.jeco-inc.com

Note: THIS PACKAGE MAY CONTAIN SMALL ITEMS WHICH SHOULD BE KEPT AWAY FROM CHILDREN

- Read through the preparation and assembly instructions in full before beginning assembly. It will help you become familiar with the parts and construction.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for. Sometimes a hardware bag can be tricky to find.
- Two people might be required for assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Please use CAUTION AND CARE WHEN LIFTING the product to avoid personal injury and (or) damage to the product.


To Assemble:

Step 1 :

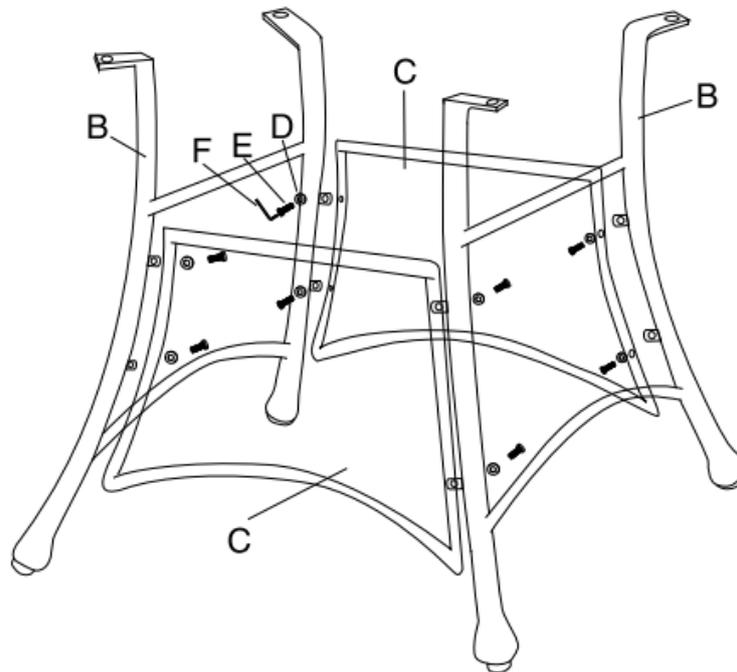

To Assemble:

Step 2 :

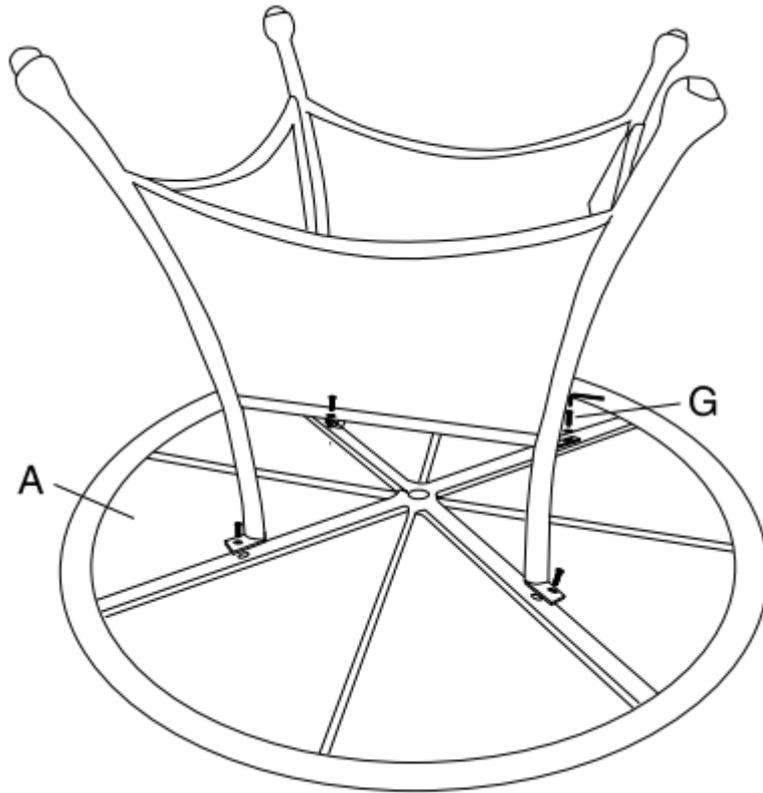

Step 3 :



Care & Maintenance:

Spills

Immediately wipe up the spill using a damp cloth. Repeat process if necessary until stain is gone.

Resin Wicker Product Care

Before using, clean the product completely with a soft dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water; Rinse thoroughly and dry completely. Do not use strong detergent or abrasive cleaners. Over time nuts and bolts can loosen. Occasionally, check nuts and bolts on the table, re-tighten if necessary.