










Thanks for shopping with Jeco®
30" Steel Fire Pit
 SKU# FP003 / 15030062



Parts List:

<p>A. Lift Handle Qty:1</p> 	<p>B. Mesh Cover Qty:1</p> 	<p>C. Wood Grate Qty:1</p> 
<p>D. Fire Bowl Qty:1</p> 	<p>E. Legs Qty:4</p> 	<p>F. Cross Qty:1</p> 
<p>G. Poker Qty:1</p> 	<p>AA. M6*12 Bolt Qty:12</p> 	<p>BB. M6 Nut Qty:5</p> 

JECO

1-800-893-3006
 Ontario, CA 91761

Made in China

If you have questions regarding this product, call
 1-800-893-3006 Mon.-Fri. 9:00-5:00 PST
 (California) and ask for our product specialists, or
 e-mail: cs@jeco-inc.com
 See many more products on the Internet!
www.jeco-inc.com

Warning:



PROPOSITION 65 WARNING: Fuel used in wood and charcoal burning appliances and the products of combustion of such fuels contain chemicals known to cause cancer, birth defects or other reproductive harm.

1. OUTDOOR USE ONLY!
2. DO NOT use this unit on a wooden deck or on combustible surfaces such as dry grass, leaves, mulch, etc.
3. DO NOT use this unit near heat sensitive or combustible structures such as vinyl or wood siding.
4. When in use, keep the fire pit area clear and at least 60cm (24inch) side clearance from combustible materials, gasoline and other flammable liquid and vapors.
5. DO NOT use gasoline or kerosene. Use only a method of lighting, which is acceptable. This unit has been designed for burning of charcoal and untreated Wood only. Do not place burning material over 75% of the full capacity for safe use.
6. NEVER LEAVE FIRE UNATTENDED! Do not allow small children near flame. Hot embers can fly out of basin in breezy conditions. Adequate fire extinguishing material should be readily available.
7. CARBON MONOXIDE HAZARD
 - i. Burning charcoal inside can kill you. It gives off carbon monoxide, which has no odor.
 - ii. NEVER burn charcoal inside, vehicles or tents.
8. DO NOT use this fire pit as a cooking appliance. This fire pit is not designed to be used for grilling food.
9. DO NOT attempt to move your fire pit while hot or in use.
10. Read all safety guidelines, warnings, instructions, and operating rules carefully before assembling and using this product.
11. Some parts may contain sharp edges – especially as noted in manual. Wear protective gloves if necessary.

To Assemble:


Please save this manual for future reference.

Caution: Read understand and follow all instructions before using this fire pit.


Account for all parts and hardware before beginning assembly

Assembled too required is cross screwdriver which is not included in hardware pack.


Step 1: Insert Lift handle (A) into the hole in Mesh cover (B) and tighten it with M6 nut (BB) underside to secure.

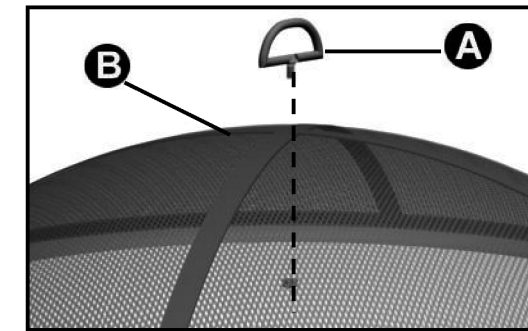

Step 2: Connect each leg (E) to the Fire Bowl (D) using M6 Bolt (AA).

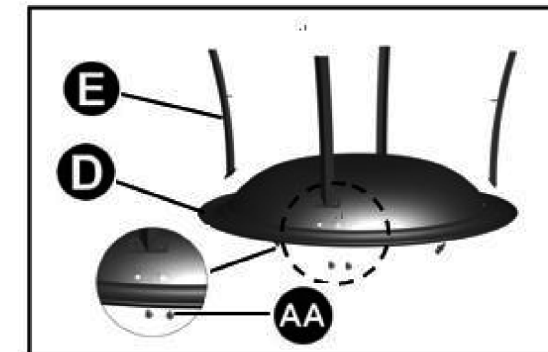

Step 3: Connect the Cross (F) to the four legs (E) using M6 Bolt (AA) and M6 Nut(BB).

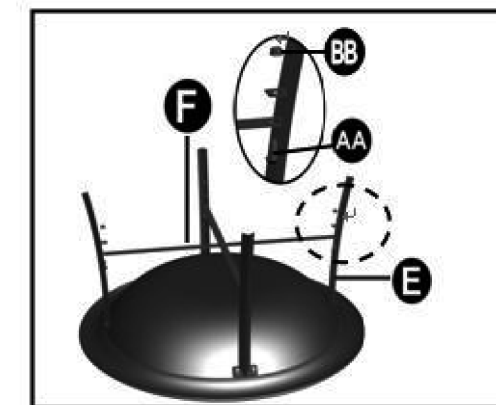

Step 4: Place the Mesh Cover (B) and Wood Grate (C) as below picture. Now the fire pit is ready for use, keep the fire poker (G) near the fire pit for use any time.

