













Thanks for shopping with Jeco®

# 34" Fire Pit

SKU# FP008 / 15030067



## Parts List:

A. Lift Handle Qty:1 	B. Screen Qty:1 	C. Cooking Grill Qty:1 	D. Decorative Ring Qty:4 
E. Fire bowl Qty:1 	F. Leg Qty:4 	G. Supporter Qty:4 	H. Poker Qty:1 
AA. M6*14 Bolt Qty:12 	BB. M6*16 Bolt Qty:4 	CC. M6 Nut Qty:4 	DD. FLAT WASHER Qty:16 

# JECO

1-800-893-3006  
Ontario, CA 91761

Made in China

If you have questions regarding this product, call  
1-800-893-3006 Mon.-Fri. 9:00-5:00 PST  
(California) and ask for our product specialists, or  
e-mail: [cs@jeco-inc.com](mailto:cs@jeco-inc.com)  
See many more products on the Internet!  
**[www.jeco-inc.com](http://www.jeco-inc.com)**

## **Warning:**




**PROPOSITION 65 WARNING:** Fuel used in wood and charcoal burning appliances and the products of combustion of such fuels contain chemicals known to cause cancer, birth defects or other reproductive harm.


1. OUTDOOR USE ONLY!
2. DO NOT use this unit on a wooden deck or on combustible surfaces such as dry grass, leaves, mulch, etc.
3. DO NOT use this unit near heat sensitive or combustible structures such as vinyl or wood siding.
4. When in use, keep the fire pit area clear and at least 60cm (24inch) side clearance from combustible materials, gasoline and other flammable liquid and vapors.
5. DO NOT use gasoline or kerosene. Use only a method of lighting, which is acceptable. This unit has been designed for burning of charcoal and untreated Wood only. Do not place burning material over 75% of the full capacity for safe use.
6. NEVER LEAVE FIRE UNATTENDED! Do not allow small children near flame. Hot embers can fly out of basin in breezy conditions. Adequate fire extinguishing material should be readily available.
7. CARBON MONOXIDE HAZARD
  - i. Burning charcoal inside can kill you. It gives off carbon monoxide, which has no odor.
  - ii. NEVER burn vehicles or tents inside.
8. DO NOT use this fire pit as a cooking appliance. This fire pit is not designed to be used for grilling food.
9. DO NOT attempt to move your fire pit while hot or in use.
10. Read all safety guidelines, warnings, instructions, and operating rules carefully before assembling and using this product.
11. Check local fire regulations and municipal by - laws for safe use.
12. Some parts may contain sharp edges – especially as noted in manual. Wear protective gloves if necessary.

## To Assemble:

**Step 1:** Attach Supporter (G) to the Fire Bowl (E) with M6 \* 14 Bolt (AA) x 4pcs and flat washer (DD) x 4pcs

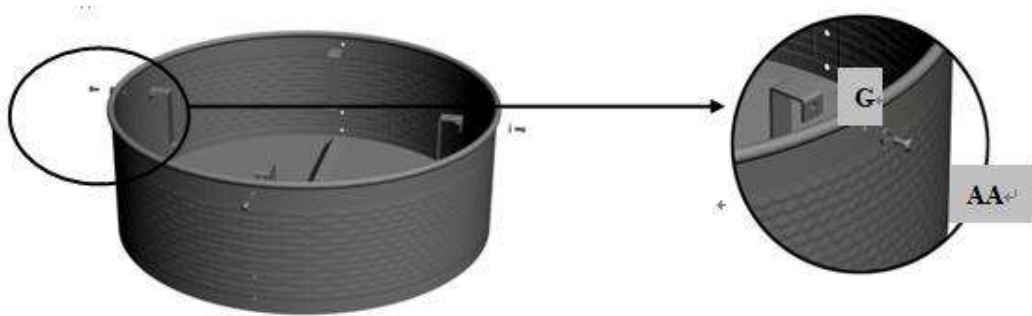

**Step 2:** Attach Leg (F) to the Fire Bowl (E) with M6 \*14 Bolt (CC) x 8pcs and flat washer (DD) x 8pcs. **DO NOT TIGHTEN BOLTS FULLY.**

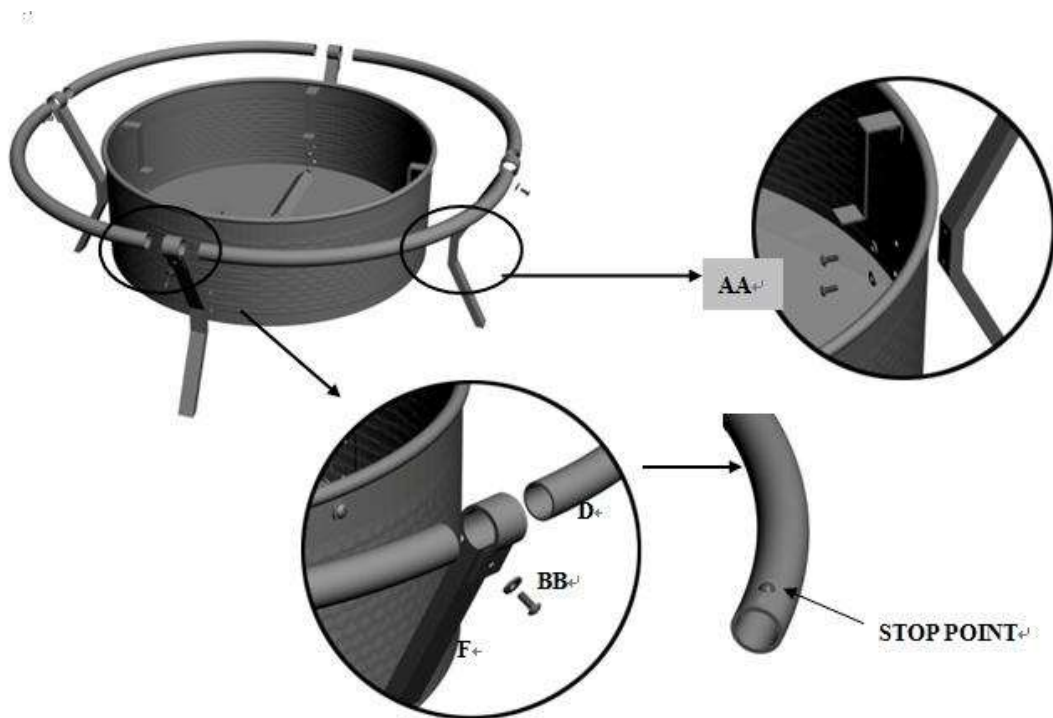

**Step 3:** Insert the Decorative ring (D) into the Leg (F) upper part. **DO NOT STOP INSERTING THE DÉCOR RING UNTIL THE STOP POINT TOUCHING THE LEG UPPER PART.** Lightly fasten it using M6 \* 16 Bolt (BB) x 4pcs and flat washer x 4pcs. Tighten all hardware to secure all parts, Place Fire Grill and Mesh Screen on the supporter.

